 
 
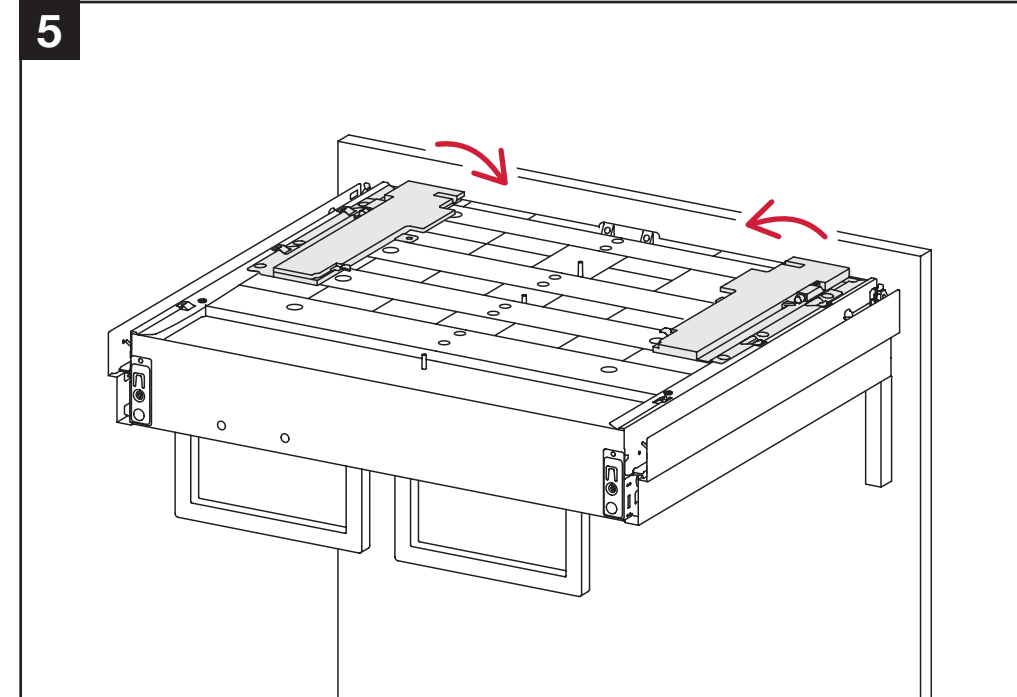 
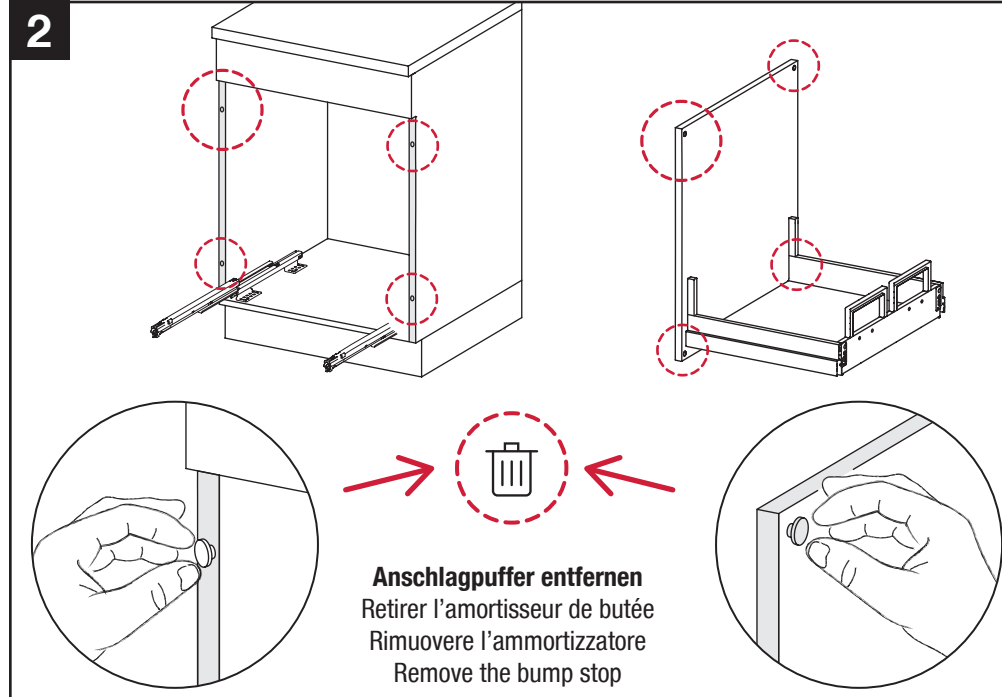 
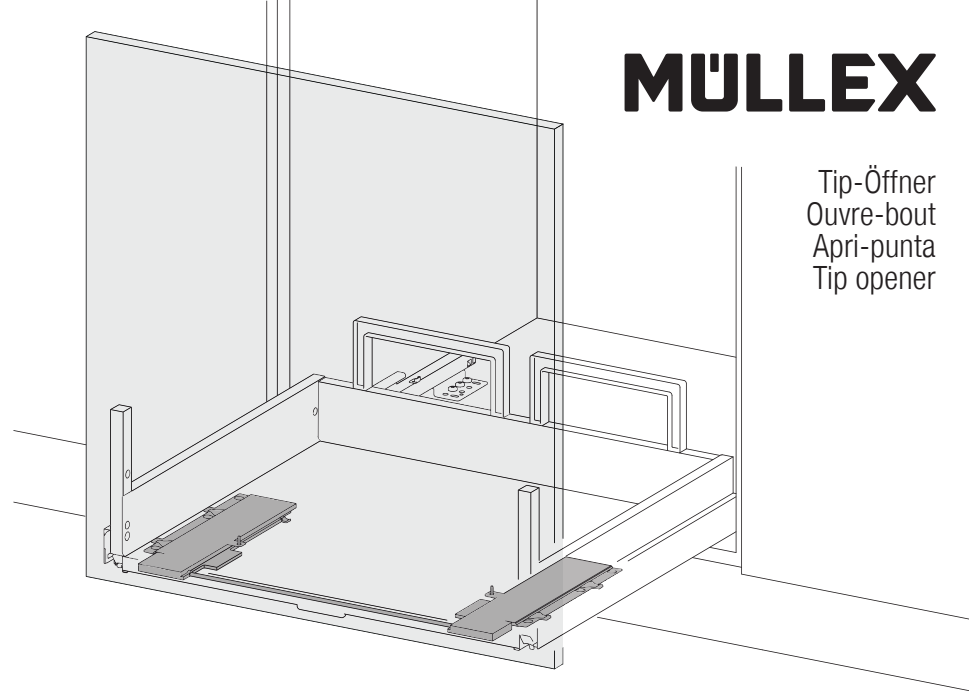 
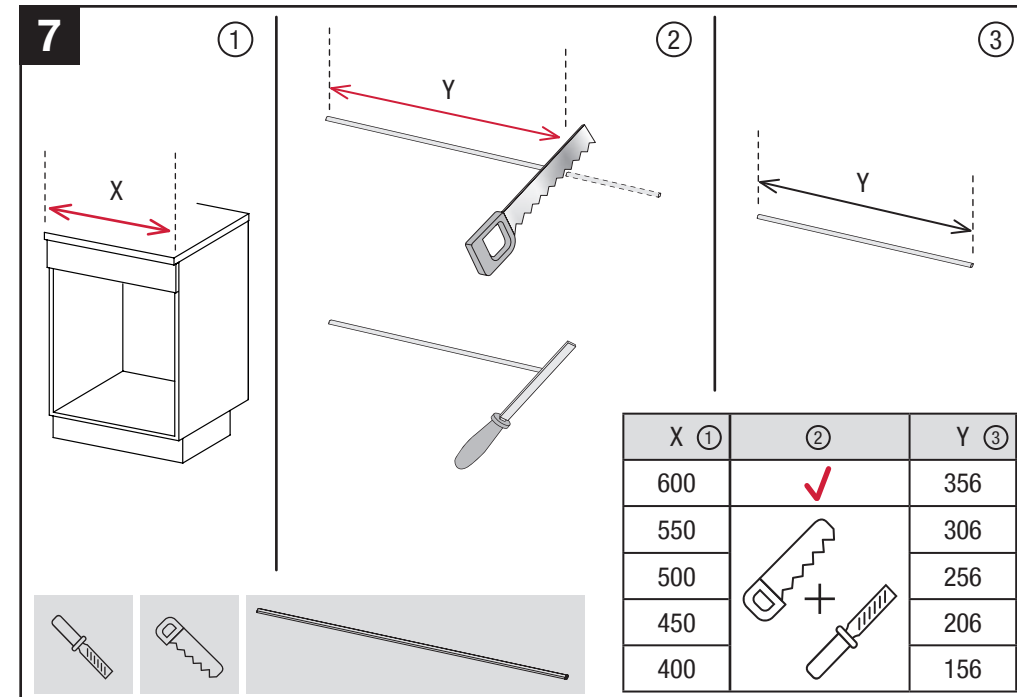 
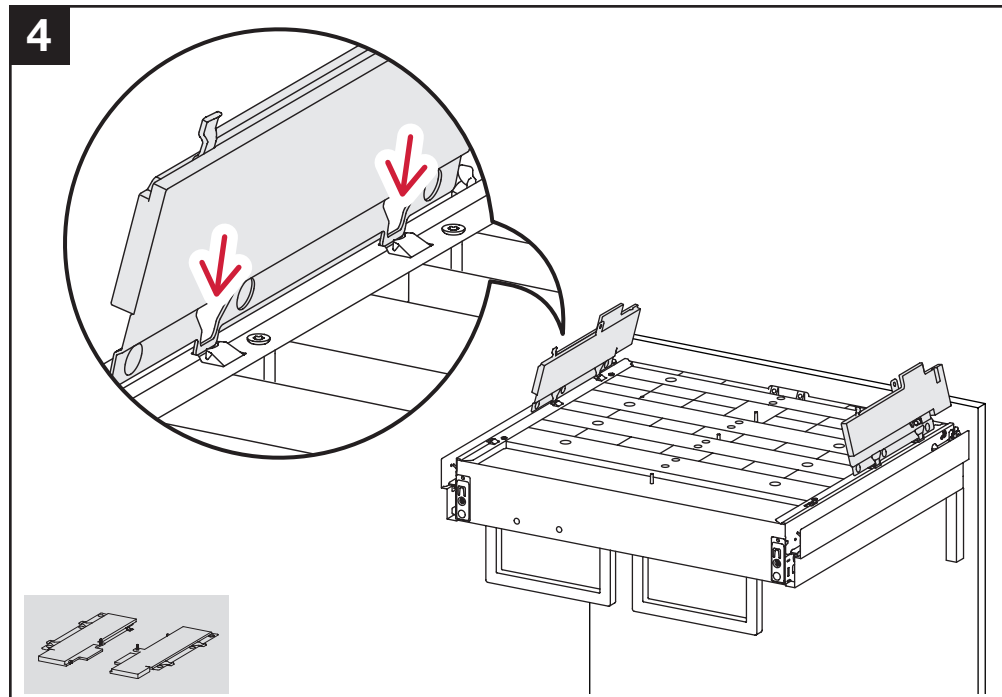 
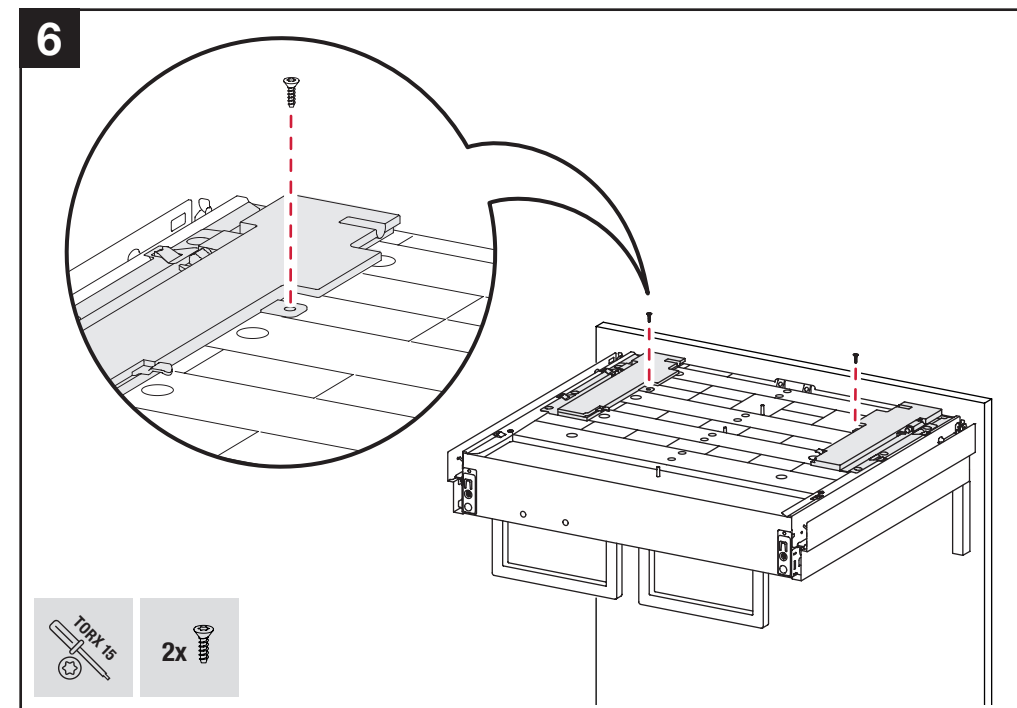 
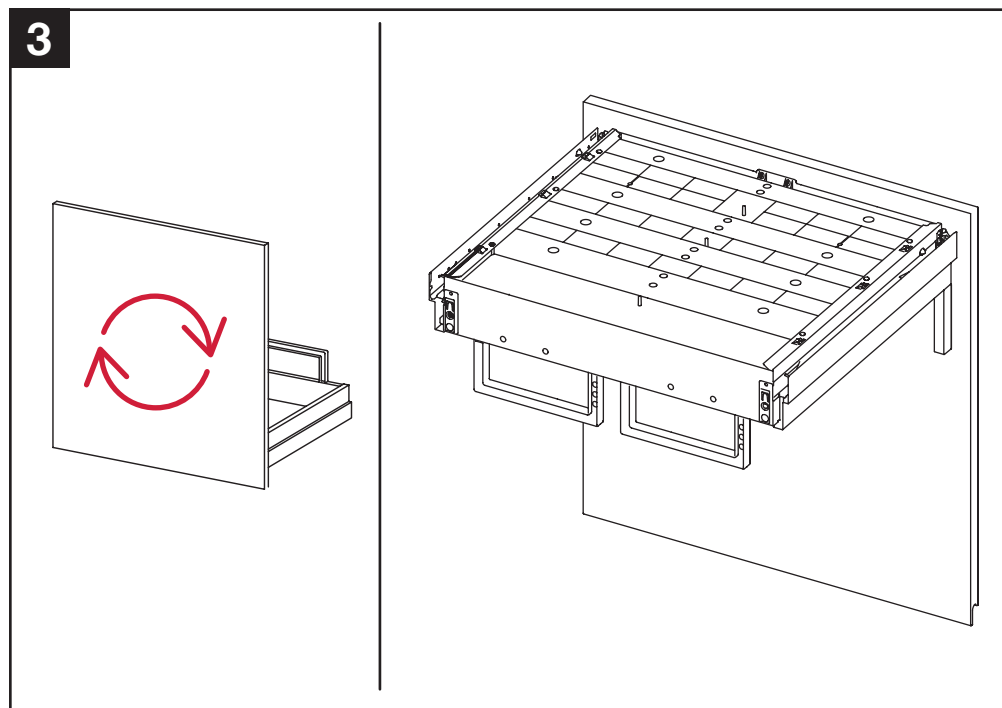 
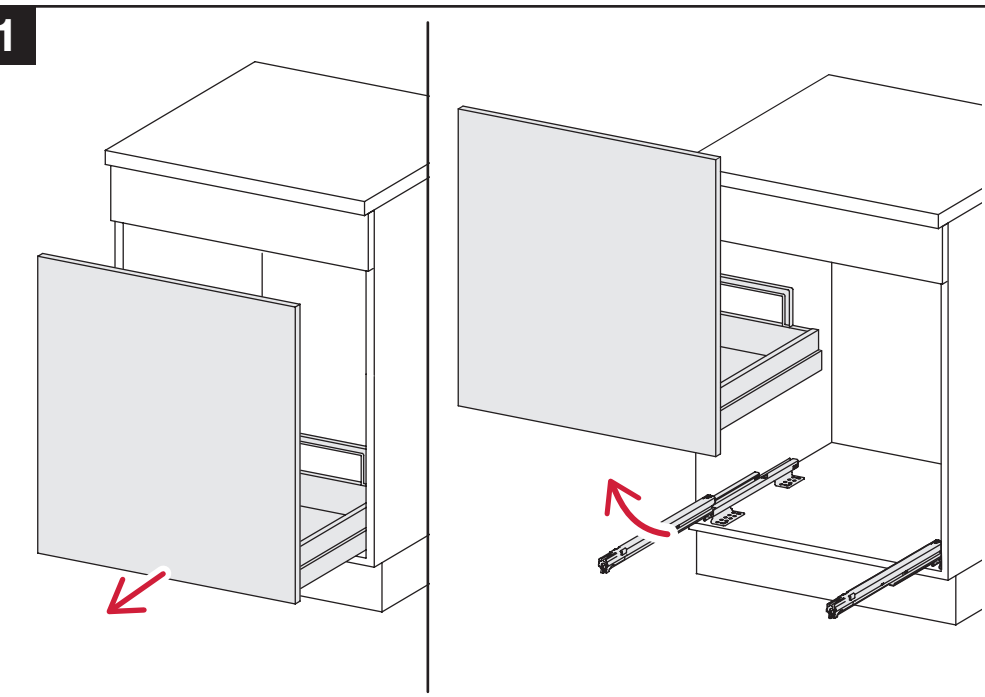 


# MÜLLEX

Tip-Öffner  
Ouvre-bout  
Apri-punta  
Tip opener

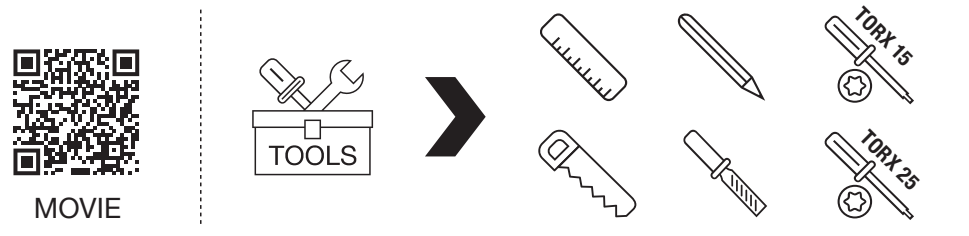

 
## Tip-Öffner / Ouvre-bout / Apri-punta / Tip opener

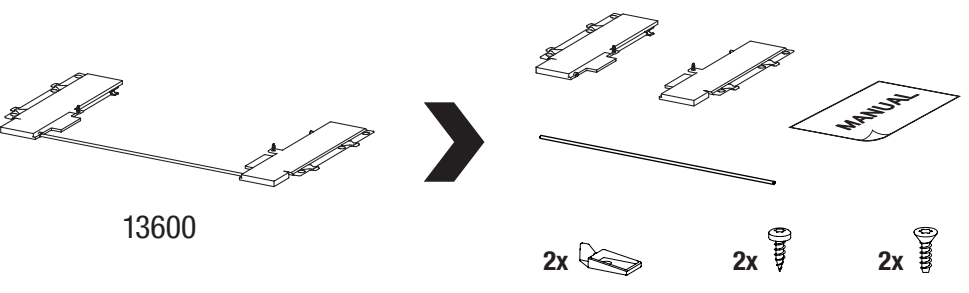


13591 / 072024




8

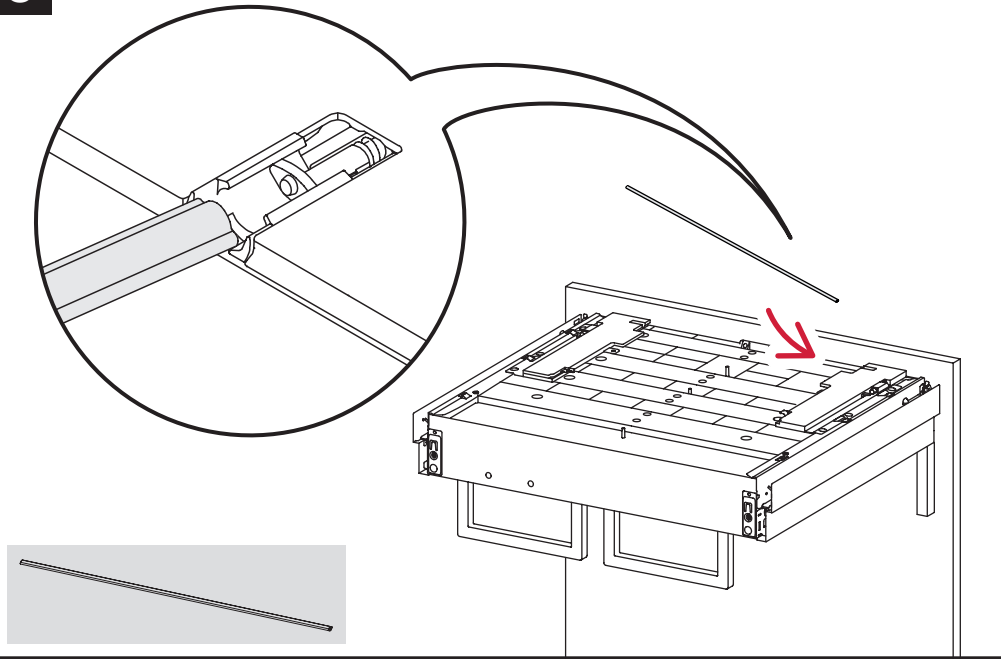


11

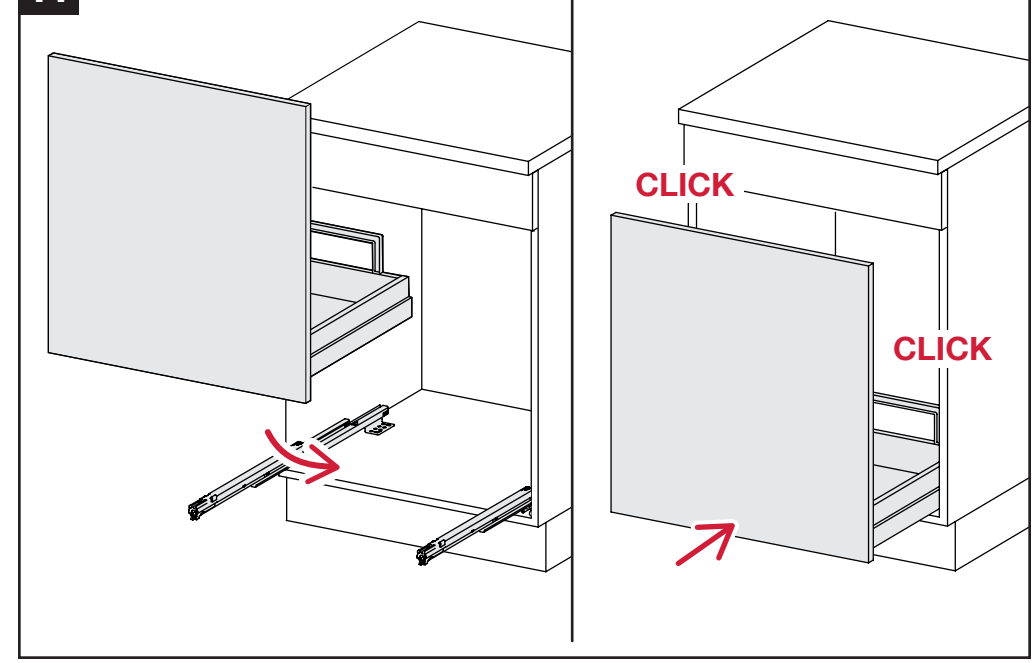 


ADJUST: 2

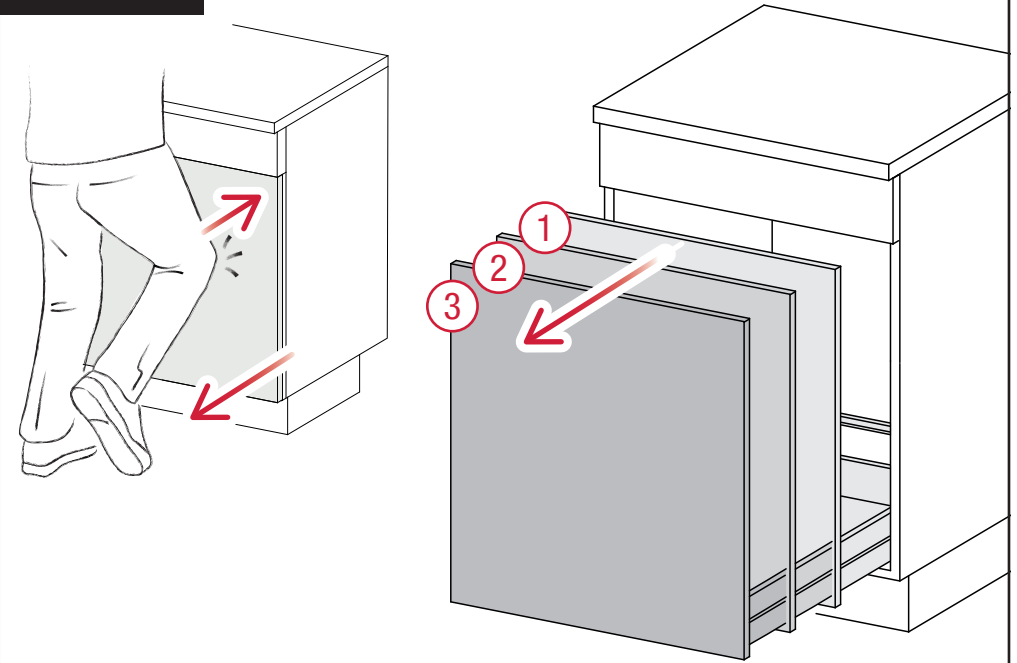 


9

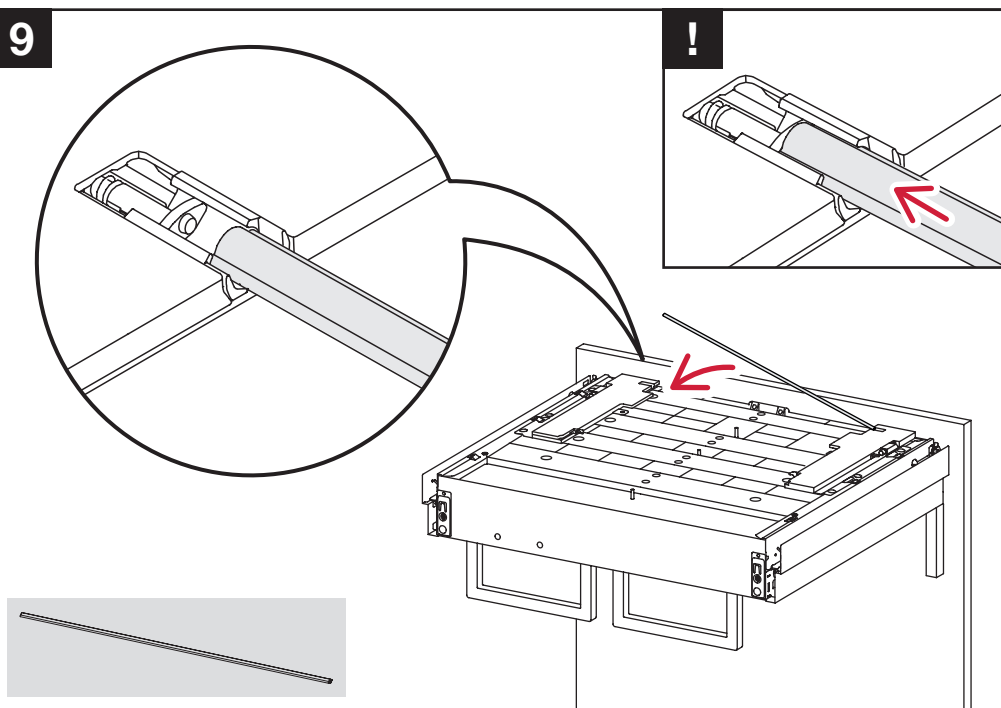 

!

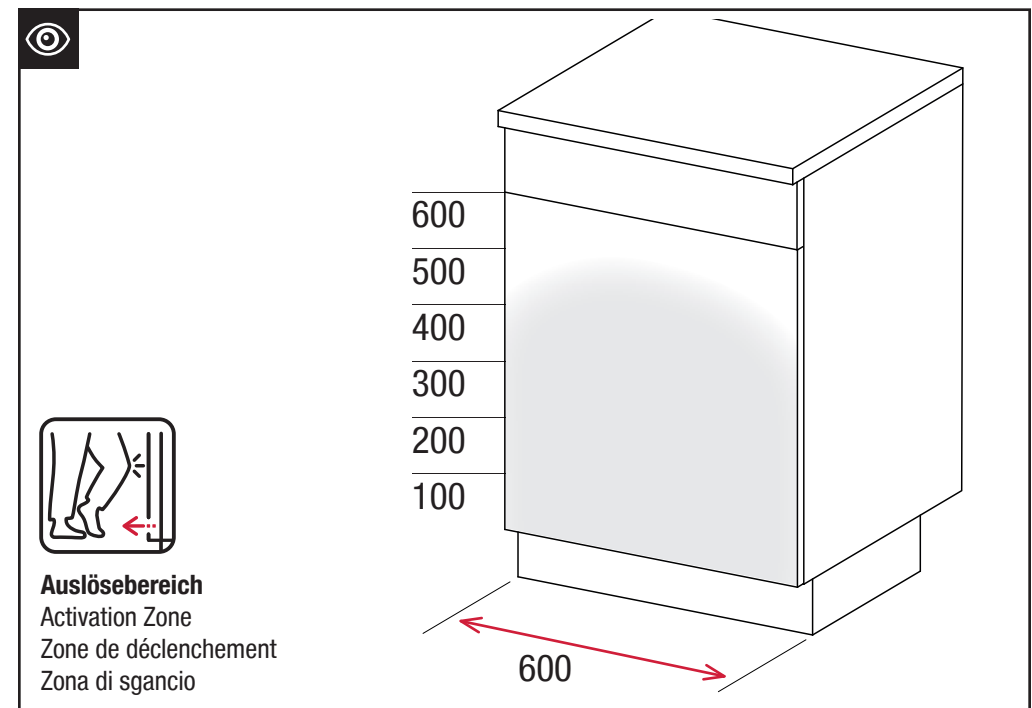 


 **Auslösebereich**  
 Activation Zone  
 Zone de déclenchement  
 Zona di sgancio

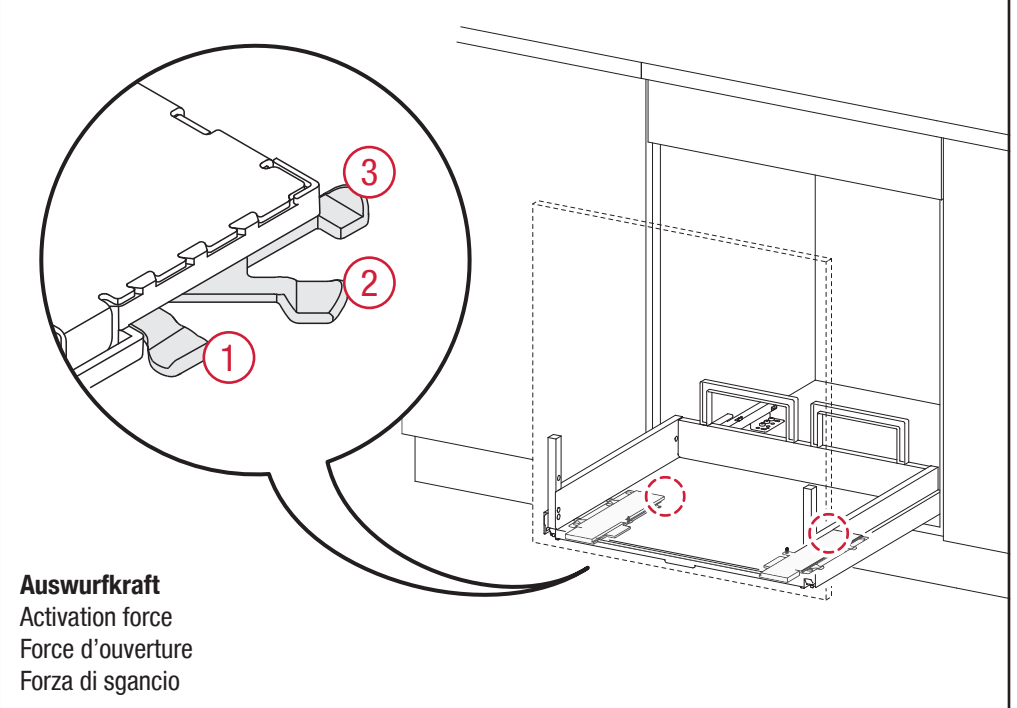


**Auswurfkraft**  
 Activation force  
 Force d'ouverture  
 Forza di sgancio

 10

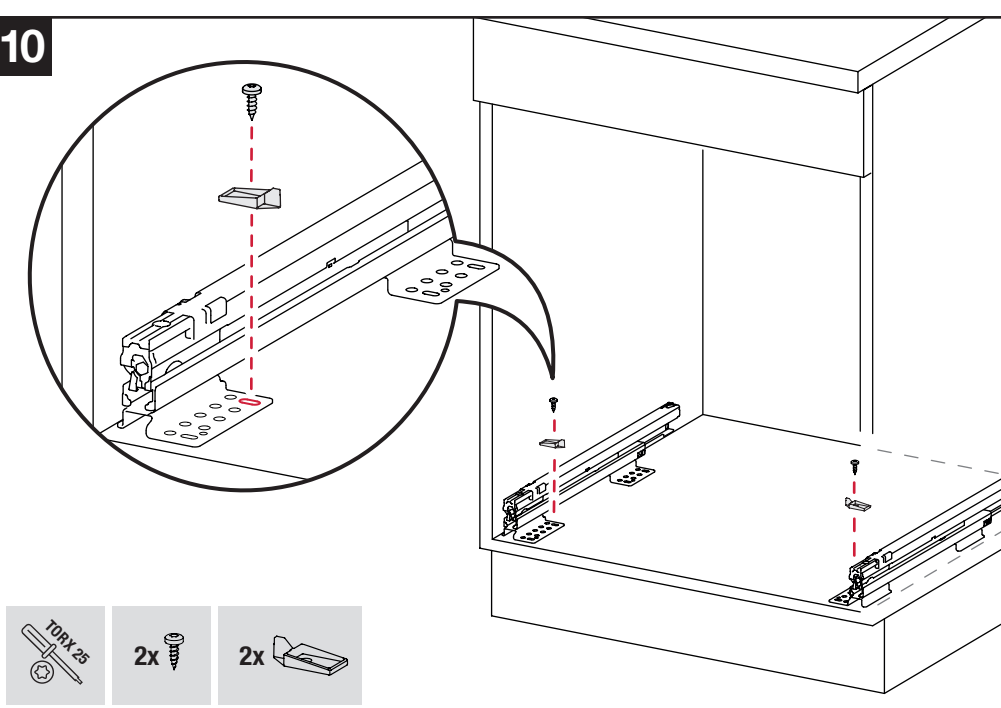

ADJUST: 1

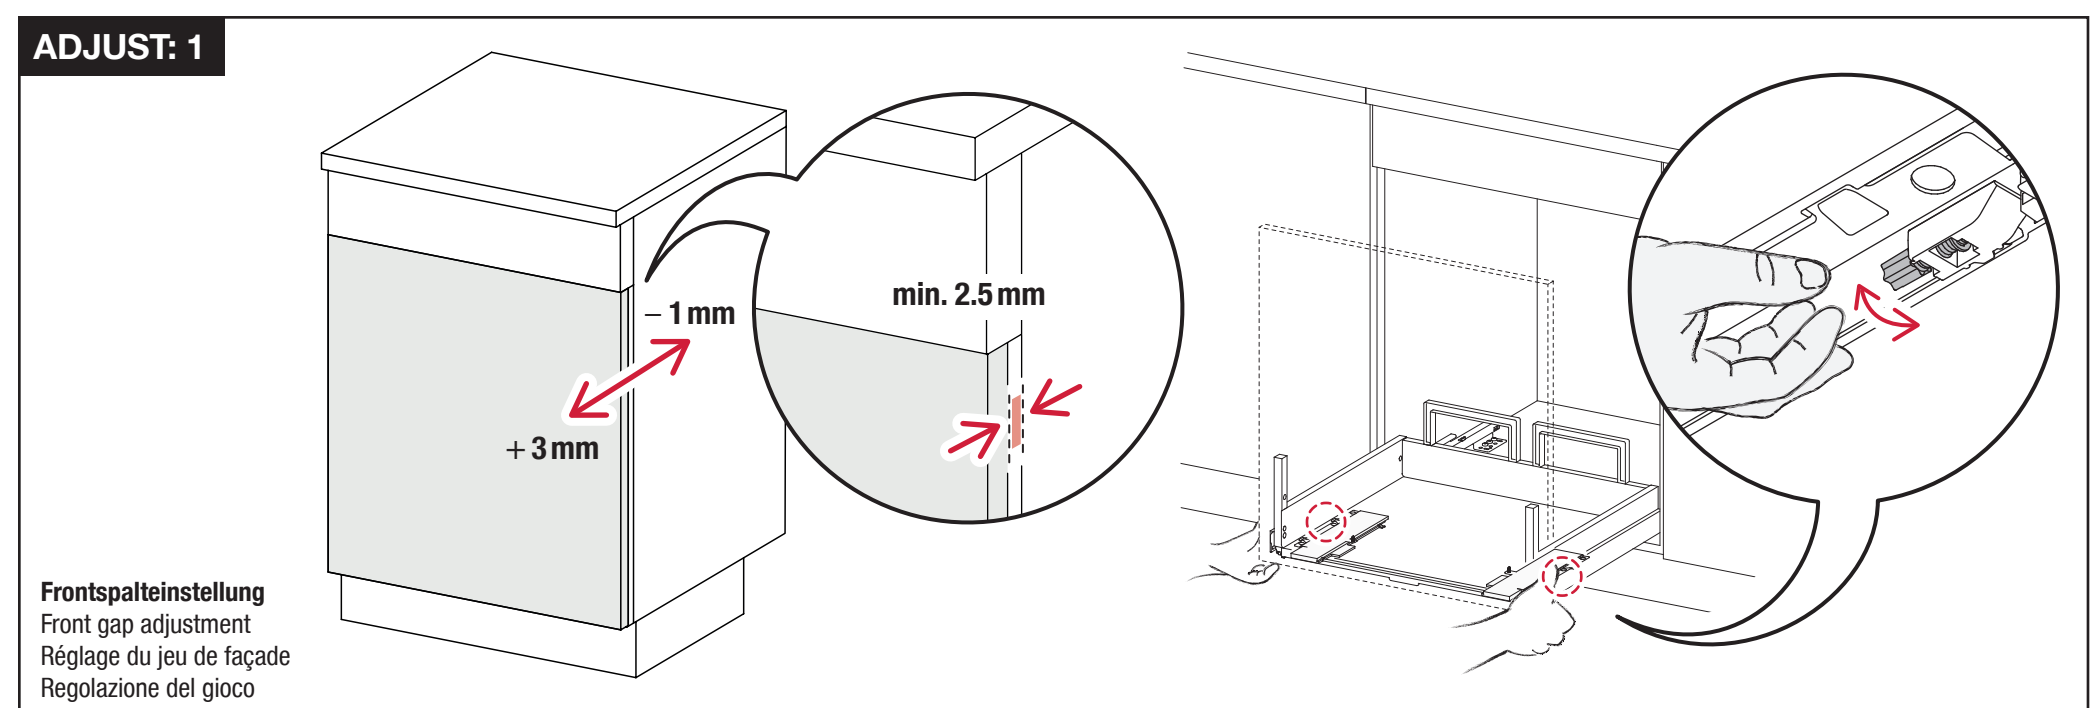 

**Frontspalteinstellung**  
 Front gap adjustment  
 Réglage du jeu de façade  
 Regolazione del gioco